


# INSTALLATION, ADJUSTEMENT AND MAINTENACE INSTRUCTIONS

ROUND POST ADAPTER

## NW6149

## THE PROTECTOR ROUND POST ADAPTER KIT

INSTALLATION, ADJUSTMENT AND MAINTENANCE INSTRUCTIONS

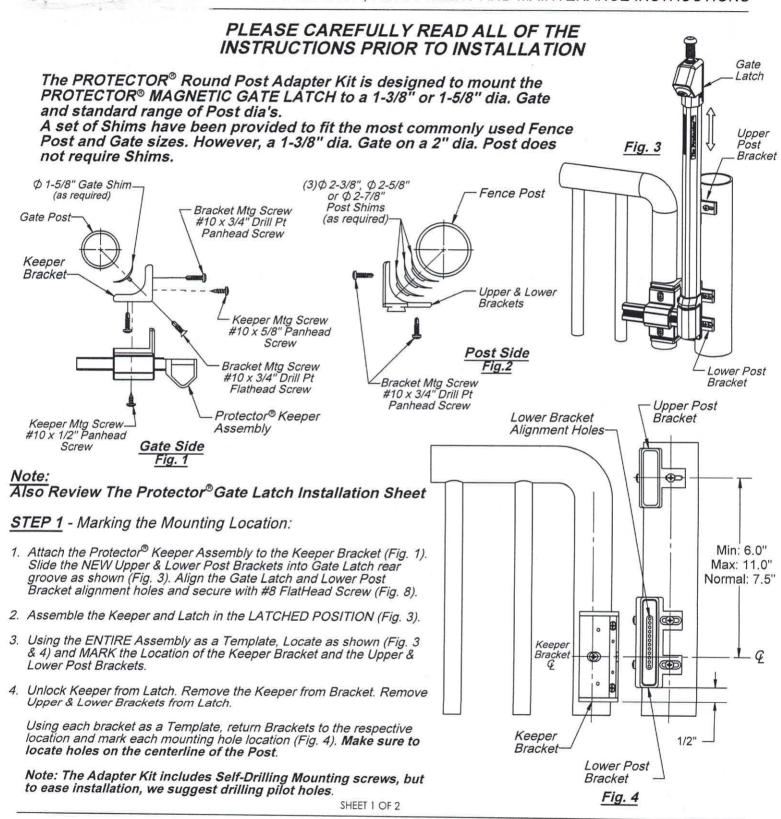


Liability Limitation & Warranty: This product is inspected prior to shipment and is warranted to the original purchaser to be free from defects in material and workmanship. No warranty applies if the product has been tampered with or damaged by the purchaser, and in no case shall the manufacturer or supplier be liable for damages which are incidental or consequential.

Disclaimer: The manufacturer and supplier of this device cannot and will not accept responsibility for unauthorized modifications to or for defective maintenance of this device. No modification to this device whatsoever is to be made other than with respect to the adjustments outlined in this installation instruction. If this device fails to function properly, it should be returned promptly to the supplier for replacement.

## NW6149

#### THE PROTECTOR ROUND POST ADAPTER KIT

INSTALLATION, ADJUSTMENT AND MAINTENANCE INSTRUCTIONS

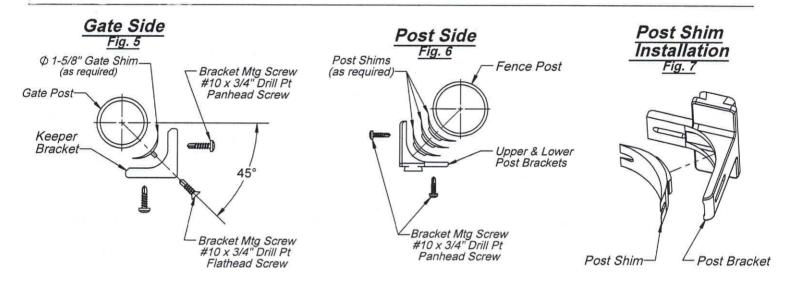

#### STEP 2 - Installing the Upper & Lower Post Brackets and Gate Latch:

Note: If Req'd, Insert the (3) 2-3/8", 2-5/8" or 2-7/8" Post Shims as shown (Fig. 7).

 Locate Upper & Lower Post Brackets (and shims as req'd.) on the Fence Post as marked. Using the supplied (6) #10 x 3/4" Drill Pt PanHead screws, insert thru the Mounting Holes and drill into the Fence Post (Fig. 6). DO NOT fully tighten screws, slight movement of the brackets may be required during installation of the Gate Latch Assembly (Fig. 3).

Note: Make sure to locate Mounting Screws on centerline of Posts.

2. Align the rear groove of the Gate Latch and Upper & Lower Post Brackets. Slide Latch into position (Fig. 3).

### STEP 3 - Installing the Keeper Bracket and Keeper Assembly:


Note: If the Gate Post is 1-5/8" dia., insert the Gate Shim as shown (Fig. 5).

- Locate the Keeper Bracket (and shim as req'd) on the Gate as marked (Fig. 4). Using the supplied (2) #10 x 3/4" Drill Pt FlatHead Screws, insert screws thru the 45° mounting holes and drill into the Gate Post (Fig. 5).
- 2. Install (2) #10 x 3/4" Drill Pt PanHead screws thru remaining slotted mounting holes and drill into the Gate Post (Fig. 5).

Note: Make sure to locate Mounting Screws on centerline of Posts

- 3. Mount Keeper Assembly to the Keeper Bracket by using the (2) #10 x 1/2" PanHead screws in the FRONT of the Keeper Assembly and the (2) #10 x 5/8" PanHead Screws in the SIDE of the Keeper Assembly (Fig. 1).
- Close Gate and confirm correct alignment. Adjust as required and tighten all mounting screws.
- 5. Re-Insert Gate Latch Set Screw (Fig. 8). Installation is complete.

Latch Set Screw⊸ #8 x 3/8" FlatHead Scr

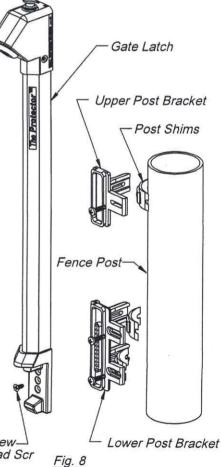

SHEET 2 OF 2

Liability Limitation & Warranty: This product is inspected prior to shipment and is warranted to the original purchaser to be free from defects in material and workmanship. No warranty applies if the product has been tampered with or damaged by the purchaser, and in no case shall the manufacturer or supplier be liable for damages which are incidental or consequential.

Disclaimer: The manufacturer and supplier of this device cannot and will not accept responsibility for unauthorized modifications to or for defective maintenance of this device. No modification to this device whatsoever is to be made other than with respect to the adjustments outlined in this installation instruction. If this device fails to function properly, it should be returned promptly to the supplier for replacement.